


# SERVICE MANUAL

## AM/FM STEREO TUNER SANSUI TU-717

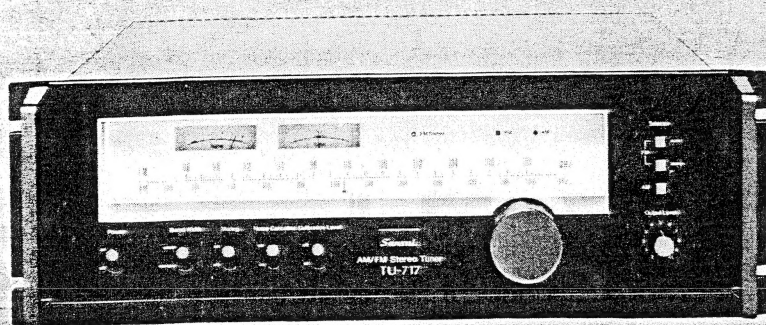

# Original

### SPECIFICATION

<b>FM Section</b>	
Tuning range	88 to 108 MHz
<b>Usable Sensitivity</b>	
MONO IHF	10.6 dB (1.85 $\mu$ V: T100)
Stereo IHF	19.0 dB (4.9 $\mu$ V)
<b>50 dB Quieting Sensitivity</b>	
Mono	13 dB (2.45 $\mu$ V)
Stereo	37.2 dB (40 $\mu$ V)
<b>Signal to noise ratio at 65 dBf</b>	
Mono	80 dB
Stereo	77 dB
<b>Distortion (at 65 dBf)</b>	
Mono: Wide	less than 0.13% at 100 Hz less than 0.07% at 1,000 Hz less than 0.15% at 6,000 Hz
Narrow	less than 0.18% at 100 Hz less than 0.15% at 1,000 Hz less than 0.2% at 6,000 Hz
Stereo: Wide	less than 0.13% at 100 Hz less than 0.07% at 1,000 Hz less than 0.15% at 6,000 Hz
Narrow	less than 0.22% at 100 Hz less than 0.2% at 1,000 Hz less than 0.25% at 6,000 Hz
<b>Adjacent channel selectivity (at 200 kHz)</b>	
Wide	3.5 dB
Narrow	8.0 dB
<b>Alternate channel selectivity (at 400 kHz)</b>	
Wide	50 dB
Narrow	80 dB
<b>Capture ratio</b>	
Wide	1.2 dB
Narrow	1.7 dB
<b>Image response ratio</b>	
86 dB (at 98 MHz)	
<b>Spurious response ratio</b>	
90 dB (at 98 MHz)	
<b>Stereo separation</b>	
Wide	41 dB at 100 Hz 45 dB at 1,000 Hz 38 dB at 10,000 Hz 36 dB at 30 ~ 15,000 Hz
<b>Frequency response</b>	
30 to 15,000 Hz +1 dB -2 dB	
<b>Antenna input impedance</b>	
300 ohms balanced 75 ohms unbalanced	

<b>AM Section</b>	
Tuning range	530 to 1,600 kHz
<b>Usable sensitivity</b>	
(Bar antenna)	50 dB/m (300 $\mu$ V/m)
<b>Selectivity (<math>\pm 10</math> kHz)</b>	
35 dB	
<b>Signal to noise ratio</b>	
50 dB	


<b>Others</b>	
<b>Output level</b>	
0 to 1V	
<b>Power requirements</b>	
100, 120, 220, 240V 50/60 Hz 120V (Usable 110 - 130V) (For U.S.A. & Canada only)	
<b>Power consumption</b>	
20W	
<b>Weight</b>	
9.2 kg (20.3 lbs) net 11.0 kg (24.3 lbs) packed	

\* Design and specifications subject to change without notice for improvements.



SANSUI ELECTRIC CO., LTD.


## 1. BLOCK DIAGRAM

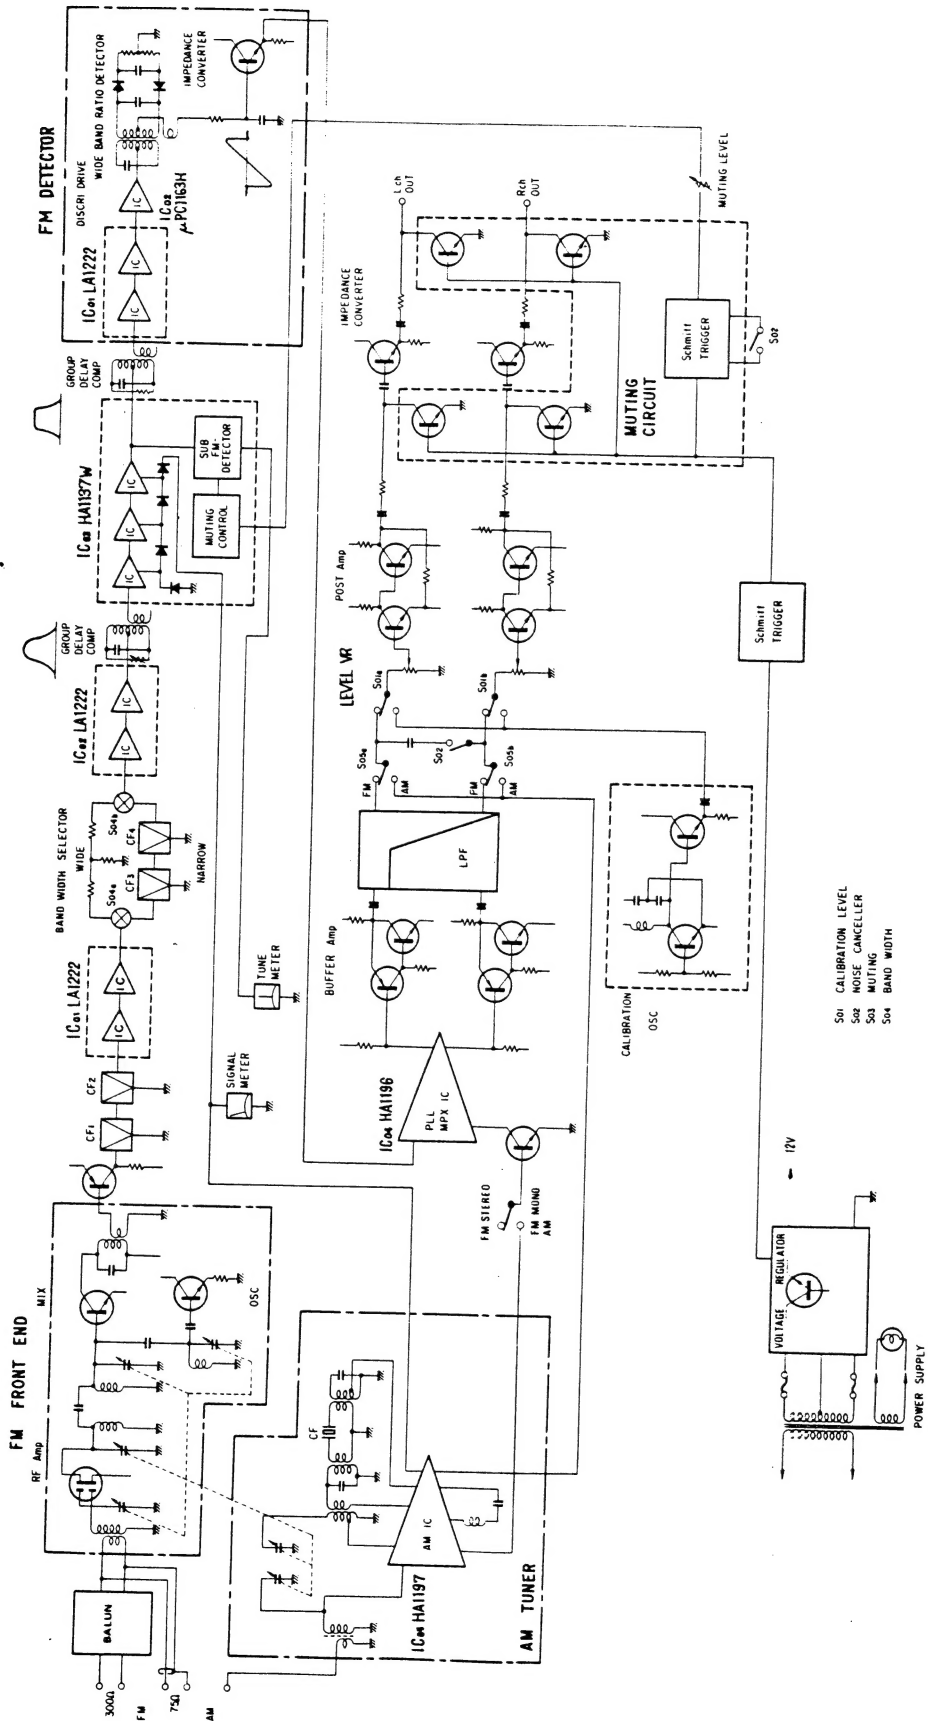

3. ADJUSTMENT

3-1. FM Adjnstment

Note: 1. Selector .....FM AUTO  
2. FM Muting Switch .....OFF  
3. Connection.... Connect the output of genescopes to TP through 100pF ceramic capacitor.  
4. Confirm the voltage, DC 11.5~12.5V at tap of 08 on F-2681  
If not, set VR01 on F-2681 to DC 12V.

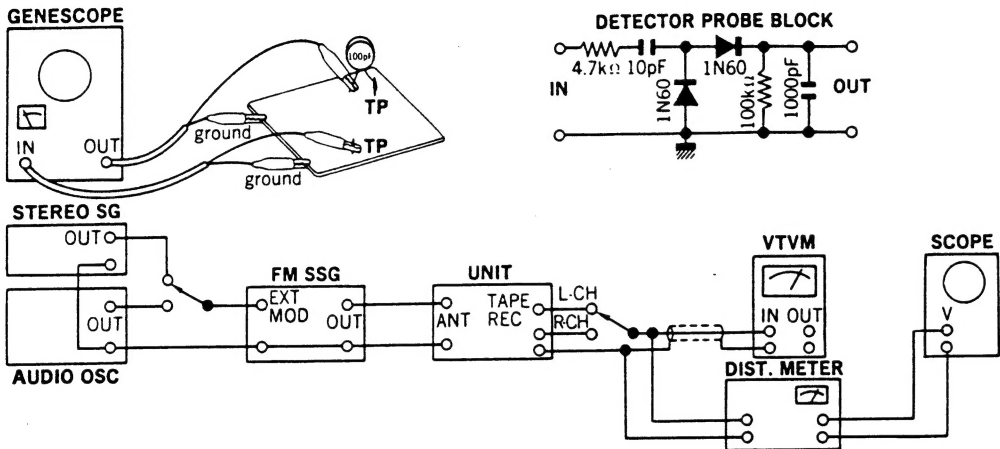

1) FM IF, RF Adjustment and Dial Calibration

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1.	IF Coil	Output 60dB Genescopes	TP01 F-2678	TP04 F-2678 Use Detector Probe	T01, T02 F-2678	Max. IF waveform	
2.	Discriminator Coil	Same as above	Same as above	TP01 F-2730	T01 F-2730 T02 F-2730	Steep linearity of S curve Make symmetrical S curve	
3.	90MHz Dial Calibration	90MHz ANT Input 65dBf (59.8dB) 1000Hz (100% MOD) FM SSG	ANT terminal 300Ω	OUT L or R-CH VTVM & Scope	L04 F-2678	Max. Output	
	106MHz Dial Calibration	106MHz ANT Input 65dBf (59.8dB) 1000Hz (100% MOD) FM SSG	Same as above	Same as above	TC04 F-2678	Same as above	
4.	90MHz RF Adj.	90MHz ANT Input Minimum valve with sine wave 1000Hz (100% MOD) FM SSG	Same as above	Same as above	L01, L02, L03 F-2678	Same as above	
	106MHz RF Adj.	106MHz ANT Input Minimum valve with sine wave 1000Hz (100% MOD) FM SSG	Same as above	Same as above	TC01, TC02, TC03 F-2678	Same as above	
5.	Signal Meter Volume	98MHz ANT Input 65dBf (59.8dB) 1000Hz (100% MOD) FM SSG	Same as above	Signal Meter	VR02 F-2678	4.3 on Meter	
6.	Tune Meter	Same as above	Same as above	Tune Meter	T03 F-2678	Center on Meter	

2) FM STEREO Adjustment

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1.	PLL VCO Adj.	98MHz ANT Input 65dBf (59.8dB) FM SSG Pilot 19kHz (9% MOD) SUB 1kHz+Pilot (100% MOD) STEREO SG	ANT terminal 300Ω	Stereo indicator	VR04 F-2678	Light indicator	Adjust the VR within center of lighting level.
	PLL VCO Adj. In case of using Freq. counter.	Same as above	Same as above	TP06 F-2678 Use Freq. counter	VR04 F-2678	76kHz ±200Hz	Make short between 23 Pin (F-2678) & chassis
2.	Separation	98MHz ANT Input 65dBf (59.8dB) FM SSG Pilot 19kHz (9% MOD) R (or L) Mode 1kHz+Pilot (100% MOD) STEREO SG	Same as above	OUT L (or R)-CH VTVM & Scope	VR02 F-2680	OUT -45dB	Confirm separation L-CH→R-CH
3.	Muting level & indicator level	98MHz ANT Input 18dBf (12.8dB) FM SSG Pilot 19kHz (9% MOD) SUB 1kHz+Pilot (100% MOD) STEREO SG	Same as above	Stereo indicator	VR03 F-2678	Muting level 18dBf (12.8dB) Indicator lighting level 18dBf (12.8dB)	FM MUTING Switch ON


3) Calibration level Adjustment

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1.	Calibration level Adj.	98MHz ANT Input 65dBf (59.8dB) MONO 1000Hz (100% MOD)	ANT Terminal 300Ω	OUT R or L-CH VTVM & Scope		Set Indication level of VTVM to 0dB	Calibration Switch.....Out
				Same as above	VR01 F-2679	Set the Indication level to -3dB from the above 0dB	Calibration Switch.....In

※ NEW MEASUREMENT FOR FM.  
Input signal level under the provision of IHFM-T-200, a new measurement method is indicated by available power ratio "dBf" To obtain approximate available power ratio "dBf", abstract 0.8 from attenuator indication of general FMMSG (open load indication type); however, the former measurement, IHFM-T-100 is designated together too.  
The way of modulation on IHFM-T-200 is shown below.

	modulation frequency	modulation mode	modulation factor
FM MONO	1000Hz		100%
FM STEREO	1000Hz	SUB	Pilot 9% Pilot+SUB 100%


※The relation between the standard input 65dBf of IHFM-T-200 and the former indication "dB" is shown below.

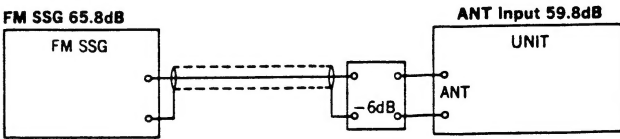



### 3-2 AM IF Adjustment & Dial Calibration

Note: 1. Selector.....AM  
2. Confirm start point of dial pointer before alignment.

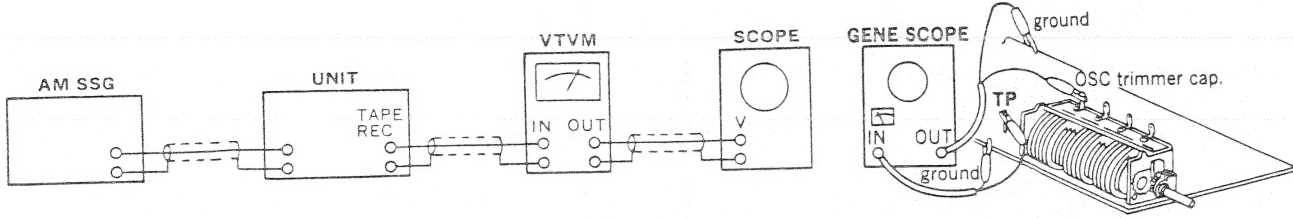

STEP	SUBJECT	FEED SIGNAL		MEASURE OUTPUT	ADJUST	ADJUST FOR	CONDITION
		FROM	TO				
1.	IF Coil	Genescope Output 70dB	TC06 F-2678	TP07 F-2678	CF05 LC02 F-2678	Max. IF waveform	
2.	600kHz Dial Calibration	600kHz ANT Input 60dB 400Hz (MOD 30%) AM SSG	AM ANT terminal	OUT L or R-CH VTVM & Scope	T04 F-2678	Max. Output	
	1400kHz Dial Calibration	1400kHz AN Input 60dB 400Hz (MOD 30%) AM SSG	Same as above	Same as above	TC06 F-2678	Same as above	
3.	600kHz RF Adj.	600kHz ANT Input 50dB 400Hz (MOD 30%) AM SSG	Same as above	Same as above	Bar Antenna L702	Same as above	
	1400Hz RF Adj.	1400kHz ANT Input 50dB 400Hz (MOD 30%) AM SSG	Same as above	Same as above	TC05 F-2678	Same as above	
4.	Signal Meter volume	1000kHz ANT Input 80dB 400Hz (MOD 30%) AM SSG	Same as above	Signal Meter	VR05 F-2678	4.3 on meter	
5.	460kHz Trap	460kHz ANT Input 80dB 400Hz (MOD 30%) AM SSG	Same as above	OUT L or R-CH VTVM & Scope	L13 LC01 F-2678	Min. Output	

### Abbreviations


**Equipment**  
 AM FM Generator Oscilloscope..... Genescope  
 AM Standard Signal Generator .....AM SSG  
 FM Standard Signal Generator .....FM SSG  
 FM Stereo Generator.....Stereo SG  
 Oscilloscope .....Scope  
 Audio Oscillator .....Audio Osc.  
 Distortion Meter .....Dist. Meter

### Others

Clockwise .....CW.  
 Counterclockwise .....CCW.  
 Antenna .....ANT.  
 Modulation .....MOD.

## 4. PARTS LOCATION & PARTS LISTS


### 4-1. F-2678 Tuner Circuit Board (Stock No. 7521451)

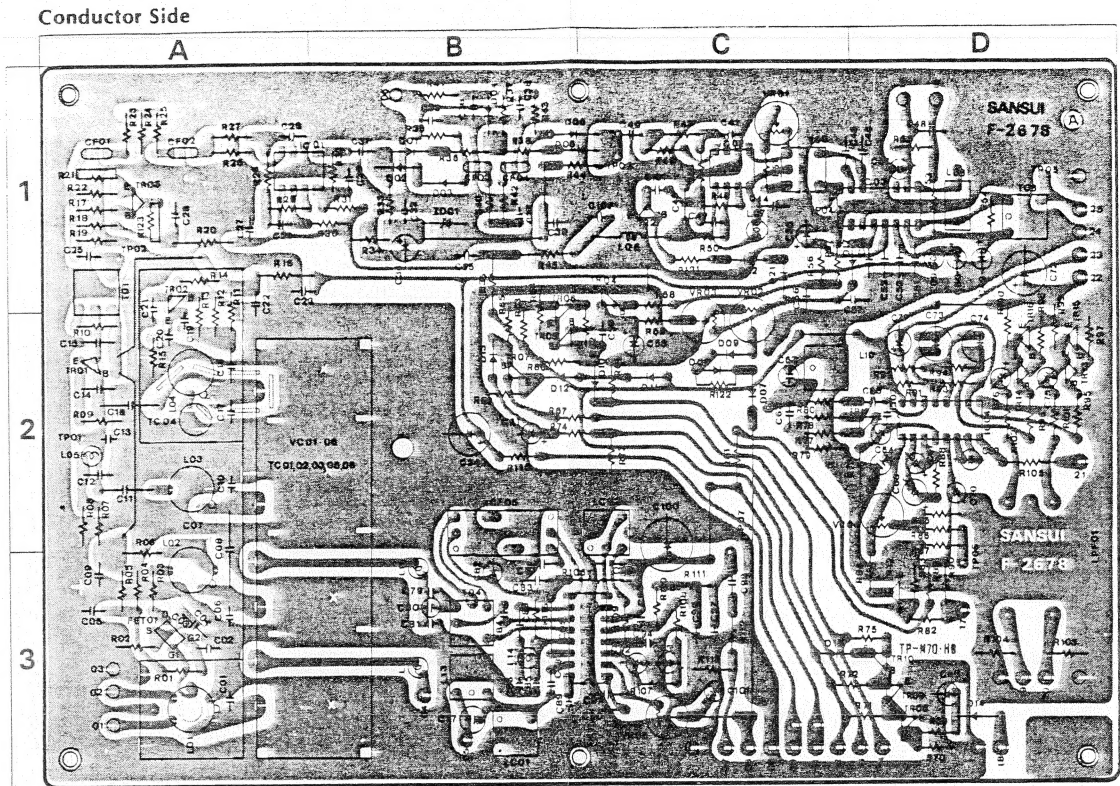

### Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR01	0305801.2	2SC1047 (B, C)	2 A	D17	0340120	VD1212 Varistor		L06	4290011	3.5μH Peaking Coil	1 C
TR02	0305801.2	2SC1047 (B, C)	2 A	D21	0311160	1S2473D Diode		L07	4900100	3.3μH	1 C
TR03	0300282.3	2SA428 (E, F)	1 A	D22	0340120	VD1212 Varistor		L08	4290300	18μH	1 D
TR04	0305731.2	2SC711 (E, F)	2 C	ZD01	0315560	RD-6A "N"	Zener Diode	L09	4900100	3.3μH Inductor	1 D
TR05	0305731.2	2SC711 (E, F)	2 B		0315770	EQ401-065		L11	4900140	1μH	3 B
TR06	0305731.2	2SC711 (E, F)	2 B	C01	0669350	15pF		L12	4900140	1μH	3 B
TR07	0300510.1	2SA733 (P, Q)	2 B	C04	0669015	2200pF	50V C.C.	L13	4290250	21μH	3 B
TR08	0305731.2	2SC711 (E, F)	3 D	C06	0669350	15pF	50V C.C.	L14	4290110	100μH Choke Coil	3 B
TR09	0305731.2	2SC711 (E, F)	3 D	C07	0669015	2200pF	50V C.C.	T01	4235920	FM IF Coil	1, 2 A
TR10	0300510.1	2SA733 (P, Q)	3 D	C08	0679024	0.33pF	500V Glimick Capacitor	T02	4235930	FM IF Coil	1 C
TR11	0305731.2	2SC711 (E, F)	3 D	C10	0669350	15pF	50V C.C.	T03	4235860	FM IF Coil	1 D
TR12	0305731.2	2SC711 (E, F)	3 D	C11	0669507	7pF	50V C.C.	T04	4220650	AM OSC Coil	
TR13	0300510.1	2SA733 (P, Q)	2 D	C16	0679008	1pF	500V Glimick Capacitor	CF01	0910380	Ceramic Filter	1 A
TR14	0300510.1	2SA733 (P, Q)	2 D	C17	0669355	20pF	50V C.C.	CF02	0910380	Ceramic Filter	1 A
TR15	0306010.1	2SC1222(2) (U, E)	2 D	C18	0669210	10pF	50V C.C.	CF03	0910380	Ceramic Filter	1 B
TR16	0306010.1	2SC1222(2) (U, E)	2 D	C19	0669210	10pF	50V C.C.	CF04	0910380	Ceramic Filter	1 B
TR21	0306342	2SC1674 (K)		C20	0669210	10pF	50V C.C.	CF05	0910370	Low Pass Filter	2, 3 B
IC04	0360320	HA1196	2 D	C37	0661150	15pF	50V C.C.	LC01	4230620	IF Coil	3 B
IC05	0360390	HA1197	3 B, C	C46	0620361	360pF	50V P.C.	LC02	4230620	IF Coil	2, 3 C
FT01	0370131	3SK41(1) (L) FET		C47	0573159	0.22μF	35V	LF01	0910210	Low Pass Filter	
D01	0311160	1S2473D	1 B	C49	0573228	0.22μF	35WV T.C.	VR01	1035120	6.8kΩ (B) Group Delay VR	1 C
D02	0310330.1	1N60	1 B	C77	0620562	5600pF	50V P.C.	VR02	1035170	47kΩ (B) FM Signal Meter VR	2 C
D03	0310330.1	1N60	1 B	C79	0661150	15pF	50V C.C.	VR03	1035190	100kΩ (B) FM Stereo and Muting Indicator VR	2 C
D04	0311160	1S2473D	1 B	C80	0620361	360pF	50V P.C.	VR04	1034250	4.7kΩ (B) V.C.O. VR	2 D
D05	0311160	1S2473D	1 B, C	C81	0669400	15pF	50V C.C.	VR05	1035110	4.7kΩ (B) AM Signal Meter VR	3 C
D06	0310330.1	1N60	1 B, C	C83	0661150	15pF	50V C.C.	VC01	1220260	AM FM Variable Capacitor	
D07	0311160	1S2473D	2 C	C86	0661150	15pF	50V C.C.	IC01	0360510	LA-1222	1 A, B
D09	0340120	VD1212 Varistor	2 C	C115	0661150	15pF	50V C.C.	IC02	0360510	LA-1222	1 C
D10	0311160	1S2473D	2 C	L01	4200720	Antenna Coil	3 A	IC03	0360350	HA1137W	1 C, D
D11	0311160	1S2473D	2 C	L02	4210340	RF Coil	3 A	TC04	1230090	Trimmer Capacitor	
D12	0311160	1S2473D	2 B	L03	4210340	RF Coil	2 A				
D13	0311160	1S2473D	2 B	L04	4220400	OSC Coil	2 A				
D14	0310340	10D1 (1S2226)	3 D	L05	4900140	1μH Inductor	2 A				
D15	0311160	1S2473D	3 C								

### 4-2. F-2703 Indicator Circuit Board (Stock No. 7595251)




### Parts List

Parts No.	Stock No.	Description
LD01	0319060	LED (Red)
LD02	0319050	LED (Green)
LD03	0319060	LED (Red)



## 4-3. F-2730 FM Discriminator Circuit Board (Stock No. 7521511)

Conductor Side

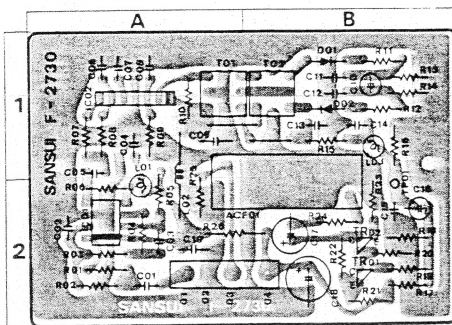


## Parts List

Parts No.	Stock No.	Description	Position
TR01	0300510, 1	2SA733 (P, Q)	Transistor 2B
TR02	0306010, 1	2SC1222(2) (U, E)	
IC01	0360510	LA-1222	2A
IC02	0360540	UPC1163H	1A
D01, 02	0311160	1S2473D Diode	1B
L01	4900100	3.3μH	Inductor 2A
L02	4290011	3.5μH	
L03	4900110	100μH	
T01	4236010	IF Coil	1A
T02	4236020	IF Coil	1B
F01	0910400	Filter	

## 4-4. F-2680 Selector SW &amp; Muting Circuit Board (Stock No. 7595241)

Conductor Side

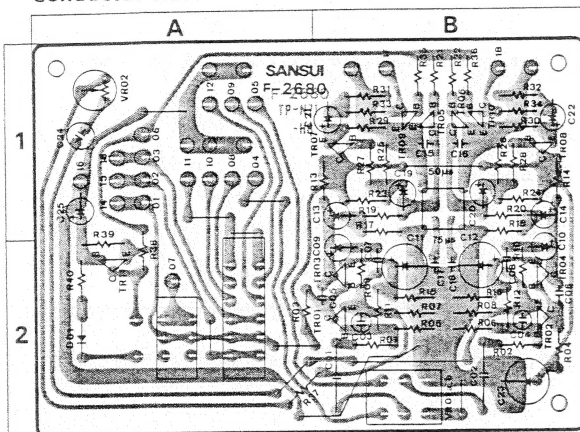


## Parts List

Parts No.	Stock No.	Description	Position
TR01, 02	0306010, 1	2SC1222(2) (U, E)	2B
TR03, 04	0306010, 1	2SC1222(2) (U, E)	2B
TR05, 06	0305952, 3	2SC945 (P, K)	Transistor 1B
TR07, 08	0306010, 1	2SC1222(2) (U, E)	
TR09, 10	0305952, 3	2SC945 (P, K)	1B
TR11	0300510, 1	2SA733 (P, Q)	2A
D01	0311160	1S2473D Diode	2A
C01, 02	0602109	1.0μF 100VW M.C.	2B
C05, 06	0661150	15pF	2B
C07, 08	0661180	18pF	2B
VR01	1015250	50kΩ (B) Level Volume	2B
VR02	1035350	4.7kΩ (B) Separation VR	1A
S05	1131440	Selector Push Switch	
S06	1110270	DE EMPHASIS Switch	

## 4-5. F-2679 Accessory SW &amp; Calibration Circuit Board (Stock No. 7595231)

Conductor Side

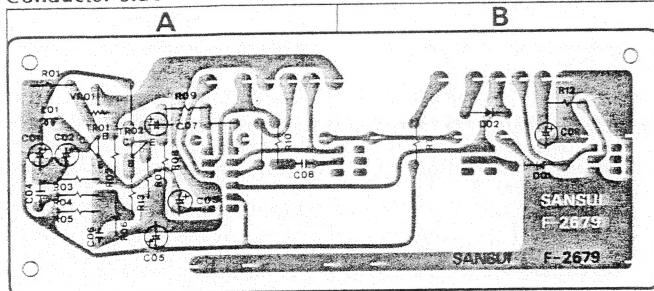


## Parts List

Parts No.	Stock No.	Description	Position
TR01	0306011	2SC1222(2) (E)	Transistor
	0306071	2SC1313 (G)	
	0306072	2SC1313 (H)	
	0305951	2SC945 (Q)	
TR02	0305952	2SC945 (P)	Transistor
	0306131	2SC1364 (6)	
	0306132	2SC1364 (7)	
D01	0311160	1S2473D	Diode B
D02	0311160	1S2473D	Diode B
L01	4900220	100mm Inductor	A
VR01	1035170	47kΩ (B) Calibration Level VR	A
S01	1171150	SLA24251 Calibration Level SW	
S02	1171130	SLA22251 Noise Canceller SW	
S03	1171130	SLA22251 Muting SW	
S04	1171130	SLA22251 Band width SW	
	2410700	6P Pin Ass'y Type F	
	2410700	6P Pin Ass'y Type F	

## 4-6. F-2681 Power Supply Circuit Board (Stock No. 7502401)

Conductor Side

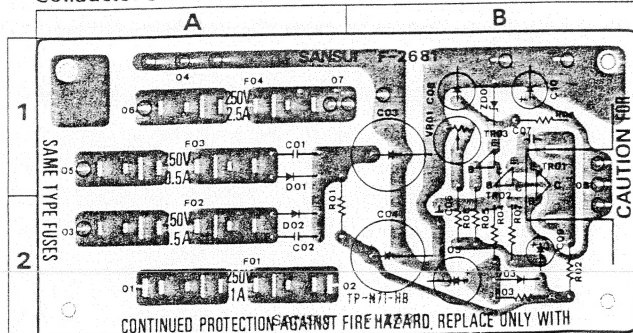

## Parts List

Parts No.	Stock No.	Description	Position
TR01	0308391-3	2SD313 (D, E, F)	Transistor 1, 2B
TR02	0305731-3	2SC711 (E, F, G)	
TR03	0305731-3	2SC711 (E, F, G)	
D01, 02	0310340	10D1 (1S2226)	Diode 1, 2A
D03	0310340	10D1 (1S2226)	
ZD01	0315770	EQA01-065 Zener Diode	1B
C01	0655103	10000pF	1A
C02	0655103	10000pF	2A
R01	0103100	10Ω 1/2W C.R.	1, 2A
VR01	1035110	4.7kΩ (B) Voltage Adjusting VR	1B
F02, 03	0431210	0.5A	250V AC Fuse 1, 2A
F04	0431250	2.5A	
	2310220	Fuse Holder	1A

5. OTHER PARTS

5-1. Front View

Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
1	5326611	Lever Switch Knob	7	5318900	O-7 Metal Type Knob	16	7007611	Front Panel Ass'y
	1171630	Power Switch		7036510	Tuning Unit Ass'y	17	5006680	Bonnet
2	5326611	Lever Switch Knob		1131410	Selector Push Switch		5109246	Binding Head Tapping Screw M4 × 16
	1171130	Band width Switch	8	5326620	Push Switch Knob	18	5066320	Bottom Plate
3	5326611	Lever Switch Knob		6906480	Spring		5109924	Binding Head Tapping Screw M3 × 8
	1171130	Muting Switch	9	4301070	Signal Meter	19	5507070	Leg
4	5326611	Lever Switch Knob	10	4301080	Tune Meter		5336600	Sansui Badge
	1171130	Noise Canceller Switch	11	0319060	LED (Red) FM Stereo			
5	5326611	Lever Switch Knob	12	0319050	LED (Green) FM			
	1171150	Calibration Level Switch	13	0319060	LED (Red) AM			
6	5318850	N-7 Metal Type Knob	14	5408180	Dial Scale			
	1015250	50k $\Omega$ (8) Level Volume	15	5416460	Dial Pointer			

5-2. Top View

Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
C701	0659801	0.01 $\mu$ F	2200300	2P Input terminal	7726130	Illumination Unit Ass'y 8V 0.3A		
C702	0659802	0.0047 $\mu$ F	2210310	Antenna terminal	3800010	Power Cord		
R701	0103122	1.2k $\Omega$ 1/2W C.R.	5136030	Nylon Fastener	3910600	Strain Relief		
L701	4290021	75 $\Omega$ /300 $\Omega$ FM Balun	5037530	Blue Filter	F701 0432210	0.5A 250V Power fuse		
L702	4200850	Bar Antenna	6146690	Guide Pulley For Dial String	0432220	1A 250V		
	3910510	Strain Relief	7136090	Tension Unit	2300060	Fuse Holder		
PT701	4002430	Power Transformer	5286450	Bar Antenna Holder (2)	2410081	Voltage Selector Socket		
			5286480	Bar Antenna Holder (1)	241009J	Voltage Selector Plug		

Figures

Connectors & Pin Ass'y

Connectors

Type A (3~10 pins)	Type B (2~6 pins)	Stock No.
		2 Pins 2420450
		3 Pins 2420460
		3 Pins(RED) 2420650
		4 Pins 2420470
		5 Pins 2420480
		6 Pins 2420490

NOTE: Since stock number of female connectors (type B) with wires are not shown in each parts list of Complete circuit board, please refer to the above parts list when ordering the connector.


Pin Ass'y

Type A (3~10 pins)	Type B (3~10 pins)	Type C (3~10 pins)
Type D (2~6 pins)	Type E (2~6 pins)	Type F (2~6 pins)


Abbreviations

C.R. : Carbon Resistor	E.C. : Electrolytic Capacitor
S.R. : Solid Resistor	BP.E.C.: Bi-Polar Electrolytic Capacitor
Ce.R. : Cement Resistor	C.C. : Ceramic Capacitor
M.R. : Metal Film Resistor	Mi.C. : Mica Capacitor
F.R. : Fusing Resistor	O.C. : Oil Capacitor
N.I.R. : Non-Inflammable Resistor	P.C. : Polystyrene Capacitor
M.C. : Mylar Capacitor	E.C. : Tantalum Capacitor

Front View

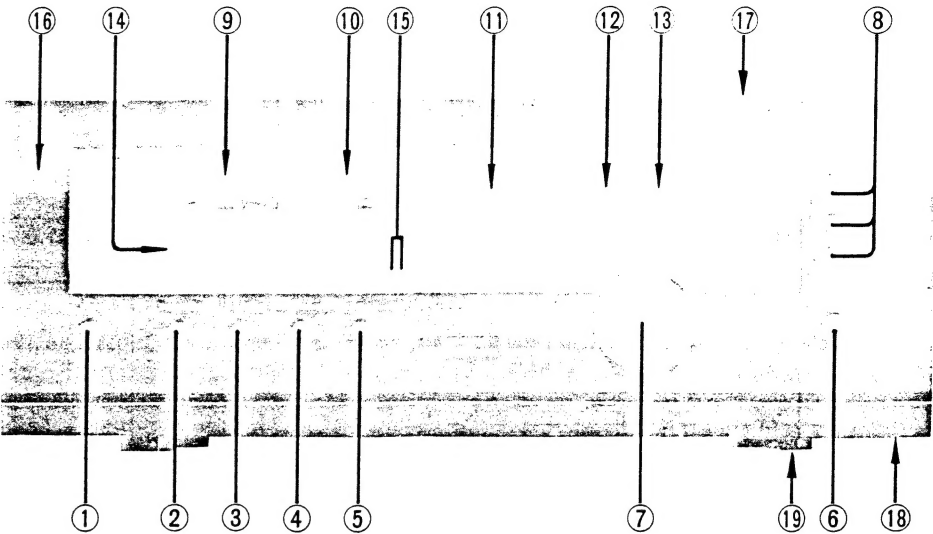

Top View

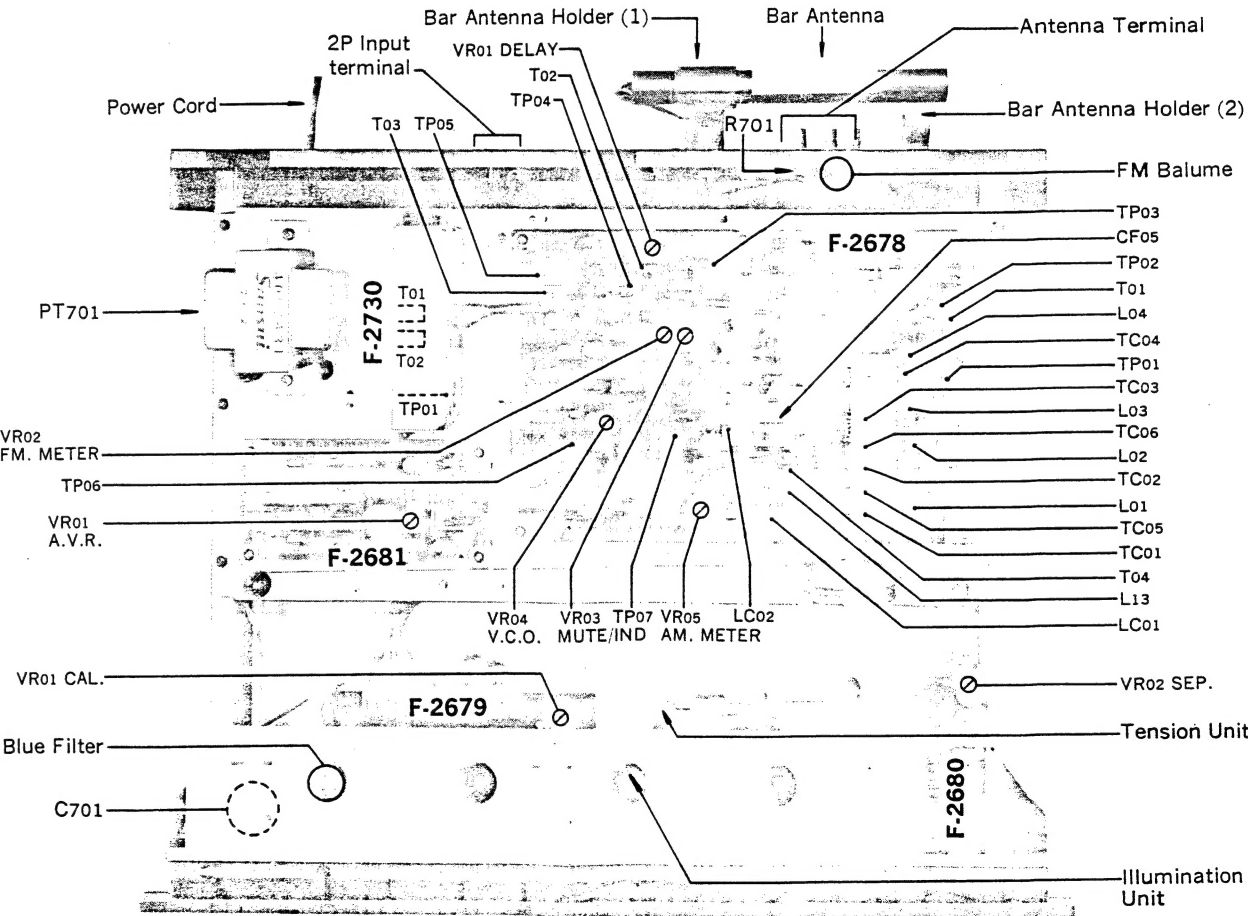






## 7. THREADING OF DIAL CORD

\*If a dial cord is cut off or slips, replace it by following procedures.

As this unit uses 0.5mm $\phi$  cord, please replace it with the same type certainly.

\*The length of dial cord is approximately 170cm (66.9 inch),

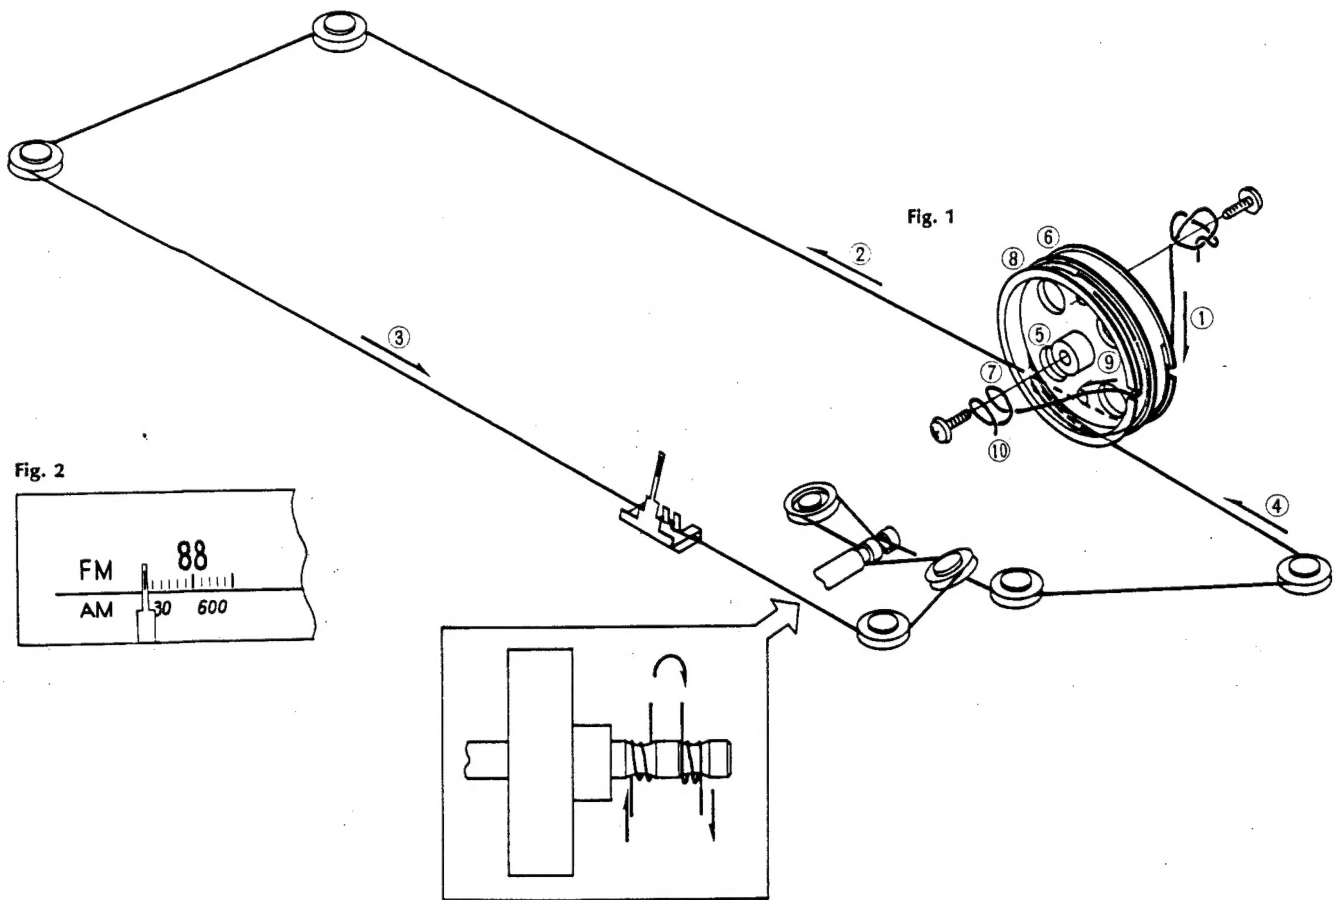

### 7-1. Threading of Dial Cord

Thread the dial cord in numerical order from ① to ⑩ as Fig. 1.

\*Open the variable capacitor completely.

### 7-2. Attachment of Dial Pointer

1) Close the variable capacitor completely.

2) Set the dial pointer to 530Hz on dial scale as Fig. 2.

\*Confirm that the dial pointer runs smoothly on the dial scale by turning the turning shaft.

Stock No.	Description
6036050	Dial Cord (0.5mm $\phi$ )
6146721	Dial pulley